


PN# 241-2

In Ground Panel Add-On Adapter Kit - Required when adding an in-ground solar panel (1 1/2" diameter header) to one side of an in-ground solar panel with a 2" diameter head.

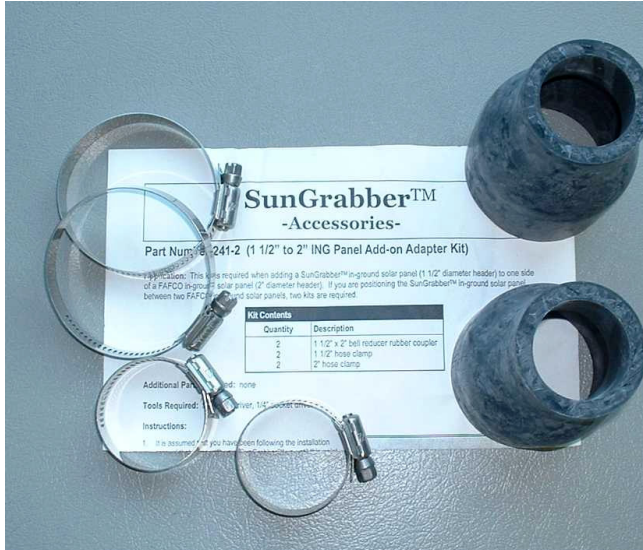

You get:

2 x 1 1/2" Bell Reducer Rubber Coupler

2 x 1 1/2" Hose Clamps

2 x 2" Hose Clamps

Instructions

You will need:

Nothing else required

Tools:

Flat Screwdriver

1/4" Socket Driver

Courtesy of **Solar-Discounters**