


PN# 961

Above Ground Panel Add-On Kit - Required when installing extra solar panels to existing systems with 2" headers.

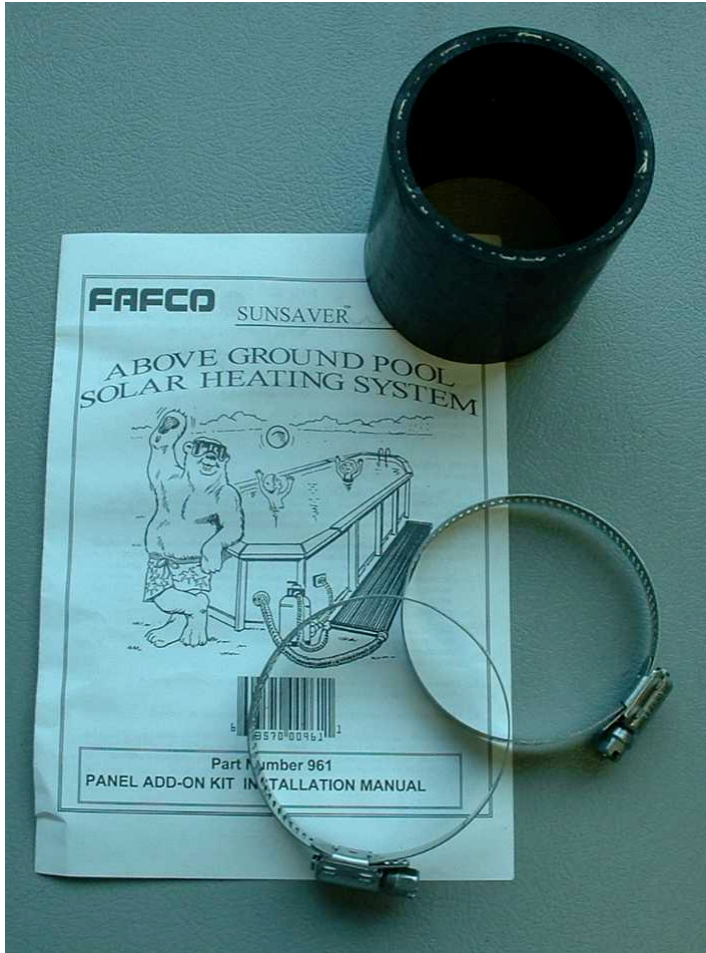

You get:

2 x 2" Hose Clamps

1 x 2" x 4" L Hose

Instructions

You will need:

Nothing Else Required

Tools:

Flat Screw Driver

Courtesy of **Solar-Discounters**